
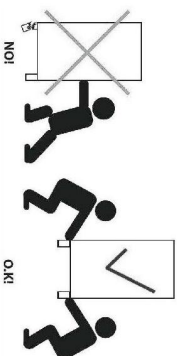


DORIN

NKSZ107

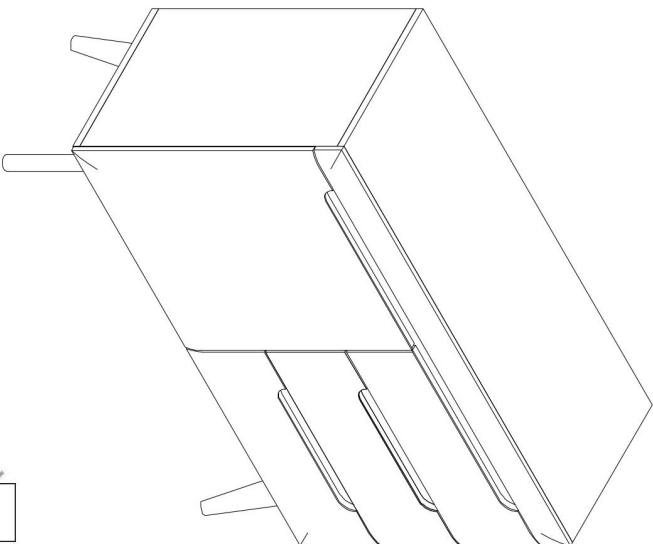


11.10.2016

- D** Montageanleitung
- FR** Notice de montage
- NL** Handleiding voor de montage
- CZ** Montážní návod
- HU** Szerelési útmutató
- TR** Montaj talimatı
- GB** Assembly Instructions
- IT** Istruzioni di montaggio
- PL** Instrukcja montażu
- SK** Návod na montáž
- RO** Instrucțiuni de montaj
- RU** Инструкции по монтажу





20 min.


1

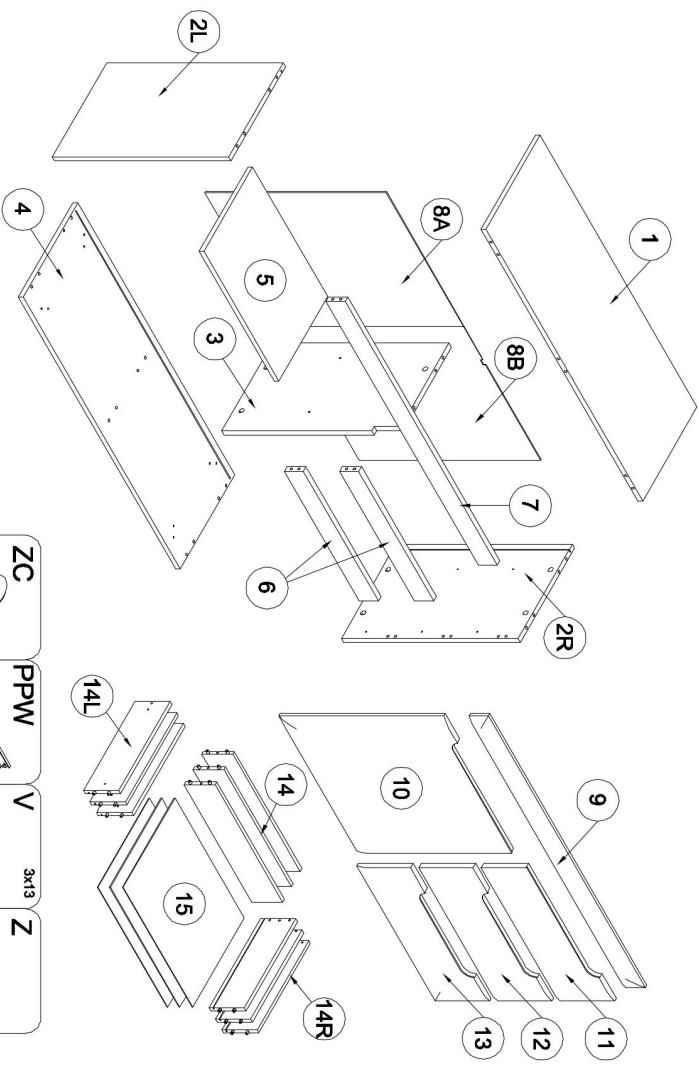


B X15	HD X8	NGD X4	N 3x20 X5	X X10	ZC X5	PPW X6	V 3x13 X18	Z X4
A X27	6x32 X4	R X2	H 6.3x13 X4	NA 4x7.3 X1	PC X2	ND 3.5x16 X16	TB X1	TA X1
							C X15	Z X15

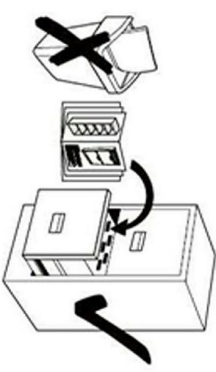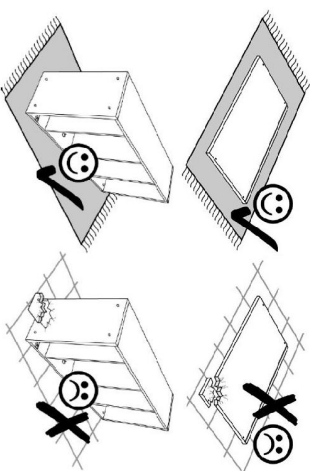



2

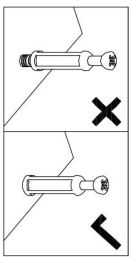


3

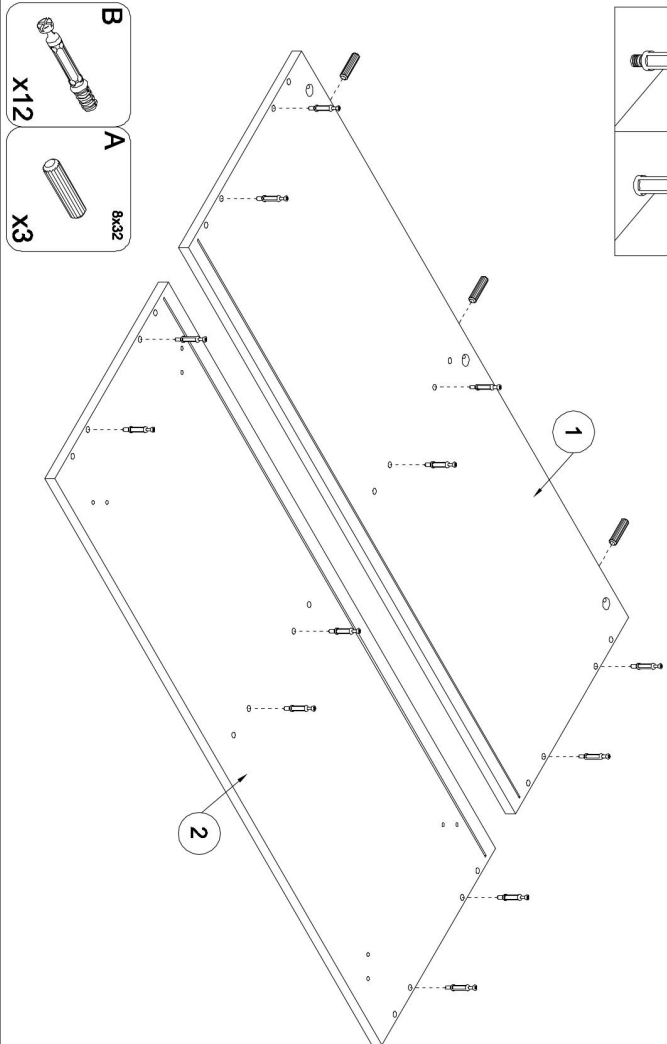



E


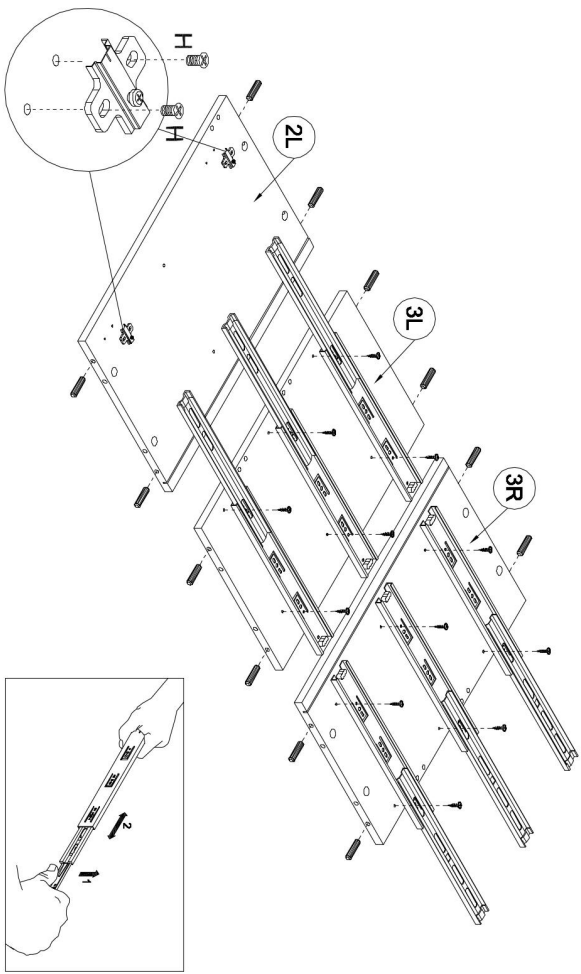
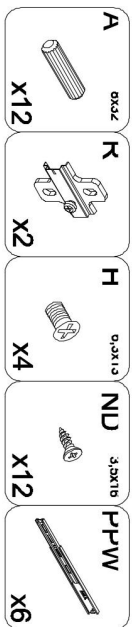


4

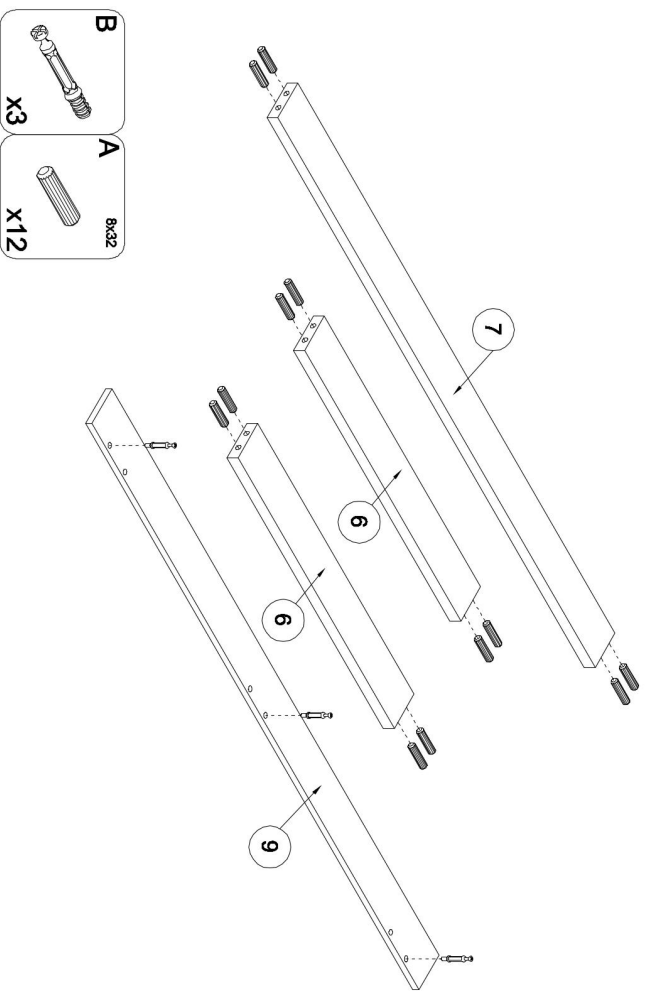


C

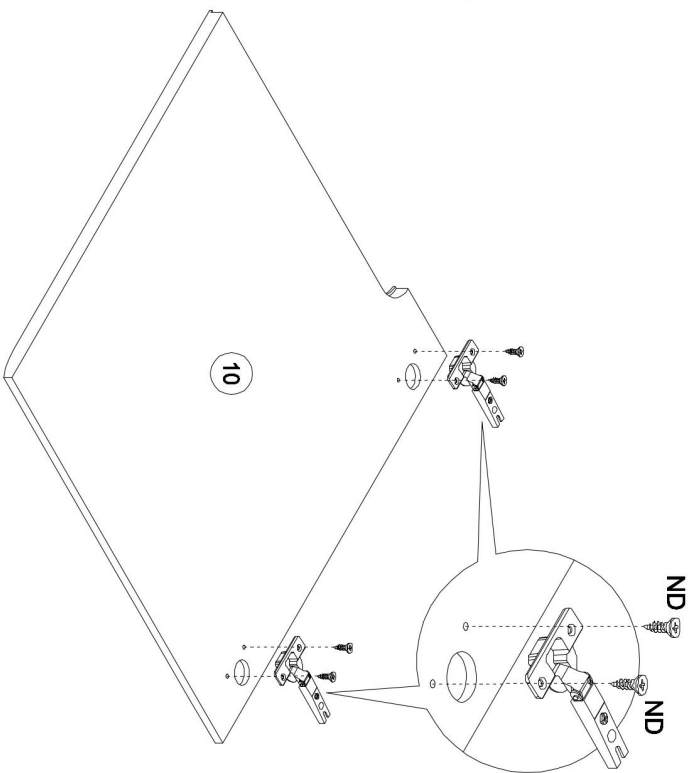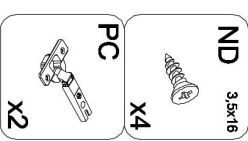


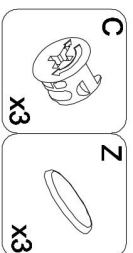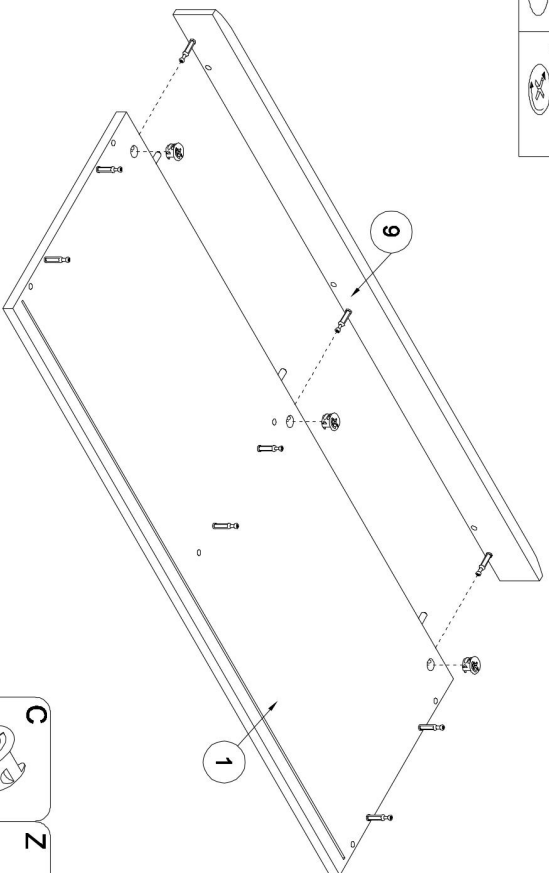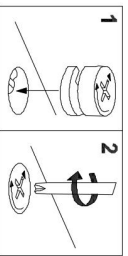



7

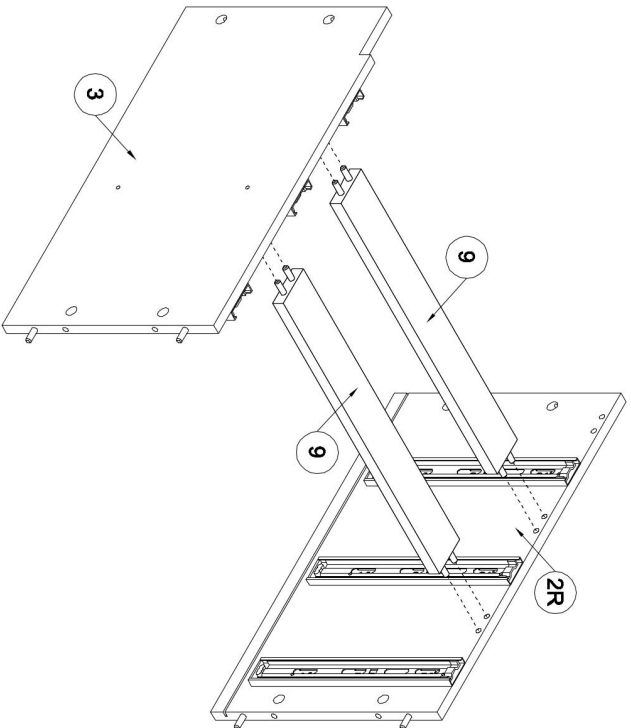


8


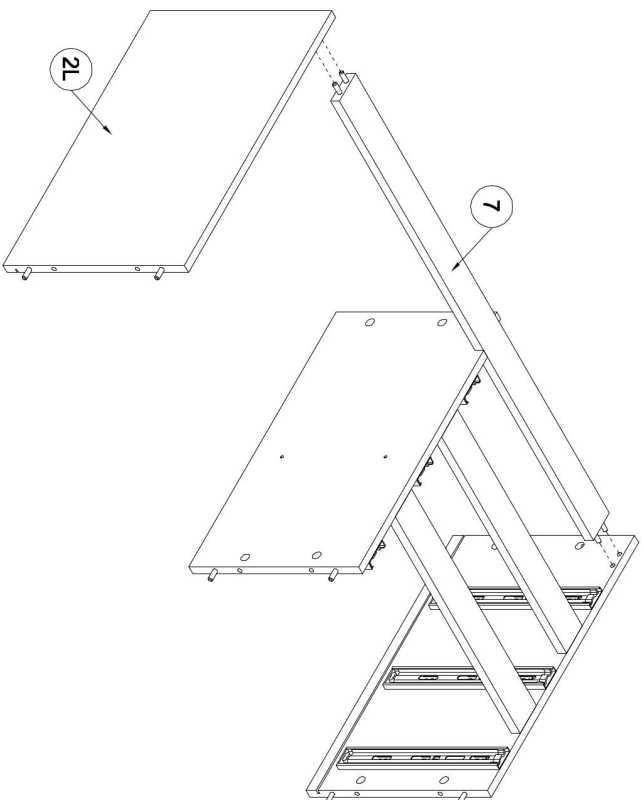


9

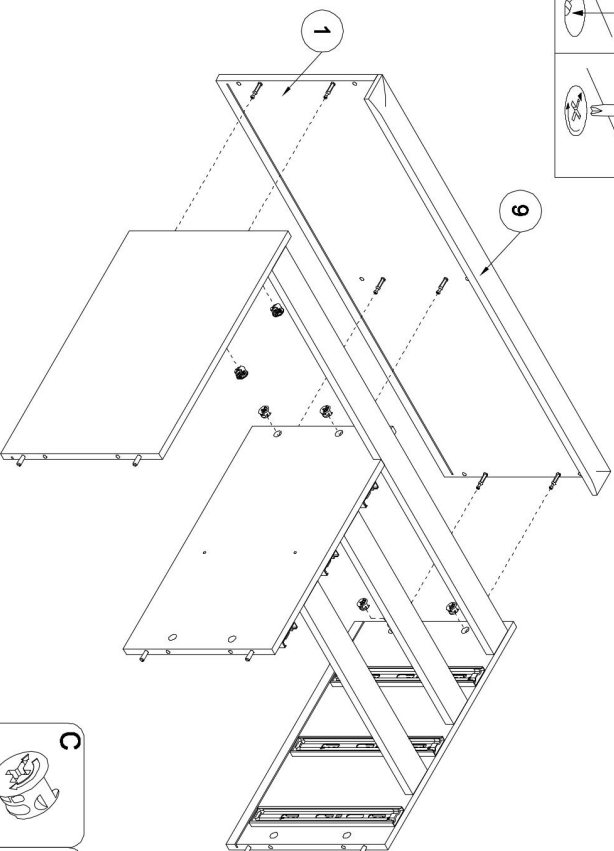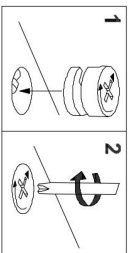



10

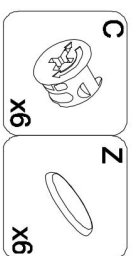

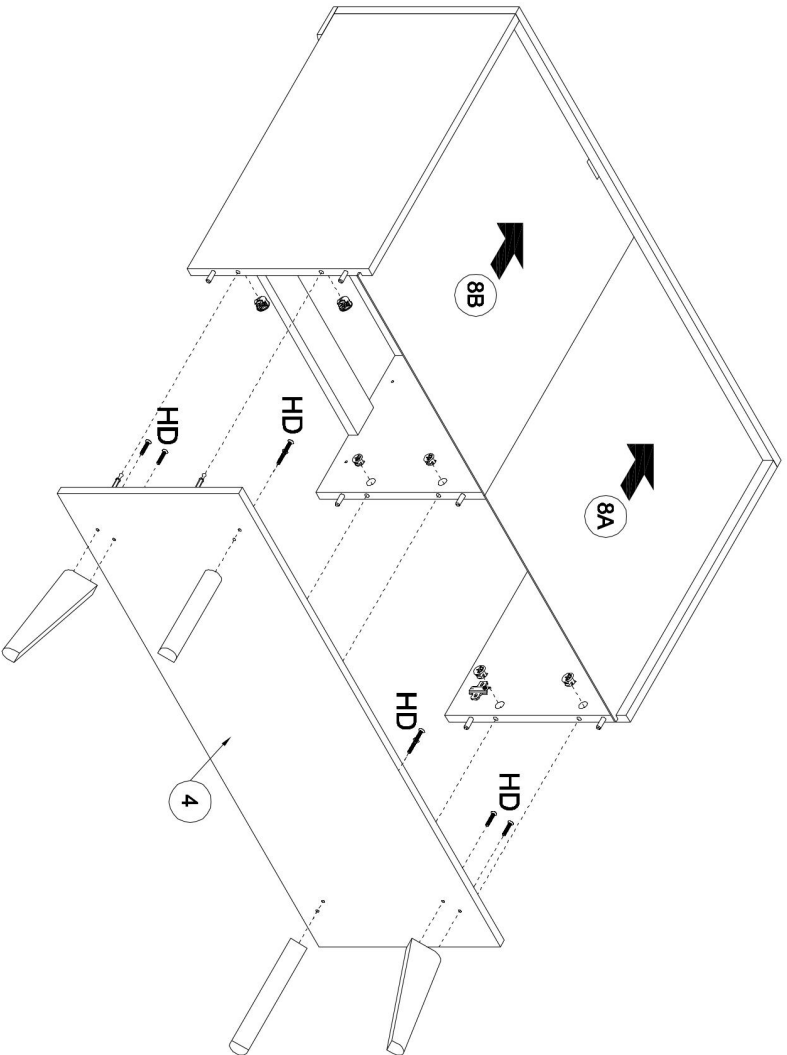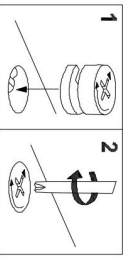

- HD**
x8
- NGD**
x4
- C**
x6
- Z**
x6


11

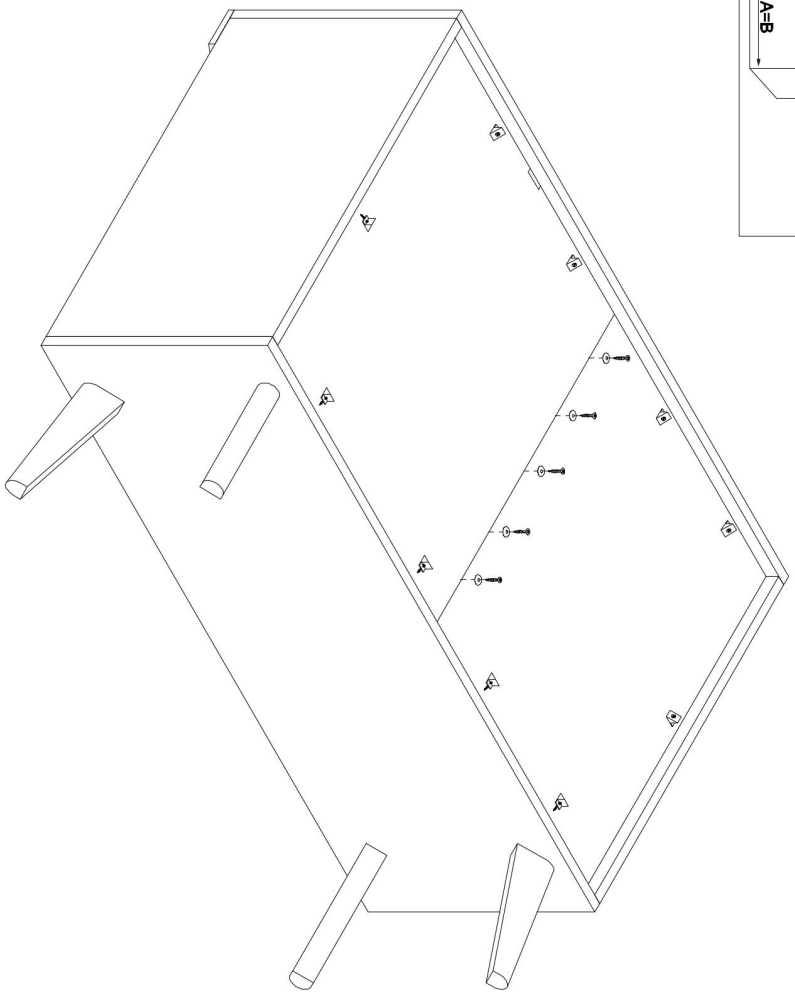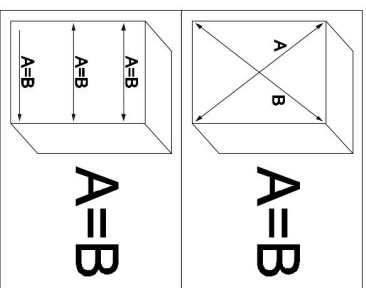


- ZC**
x5
- N** 3x20
x5
- X**
x10

12


13





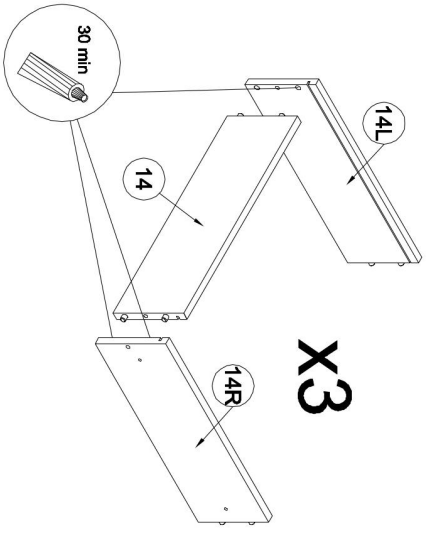


15

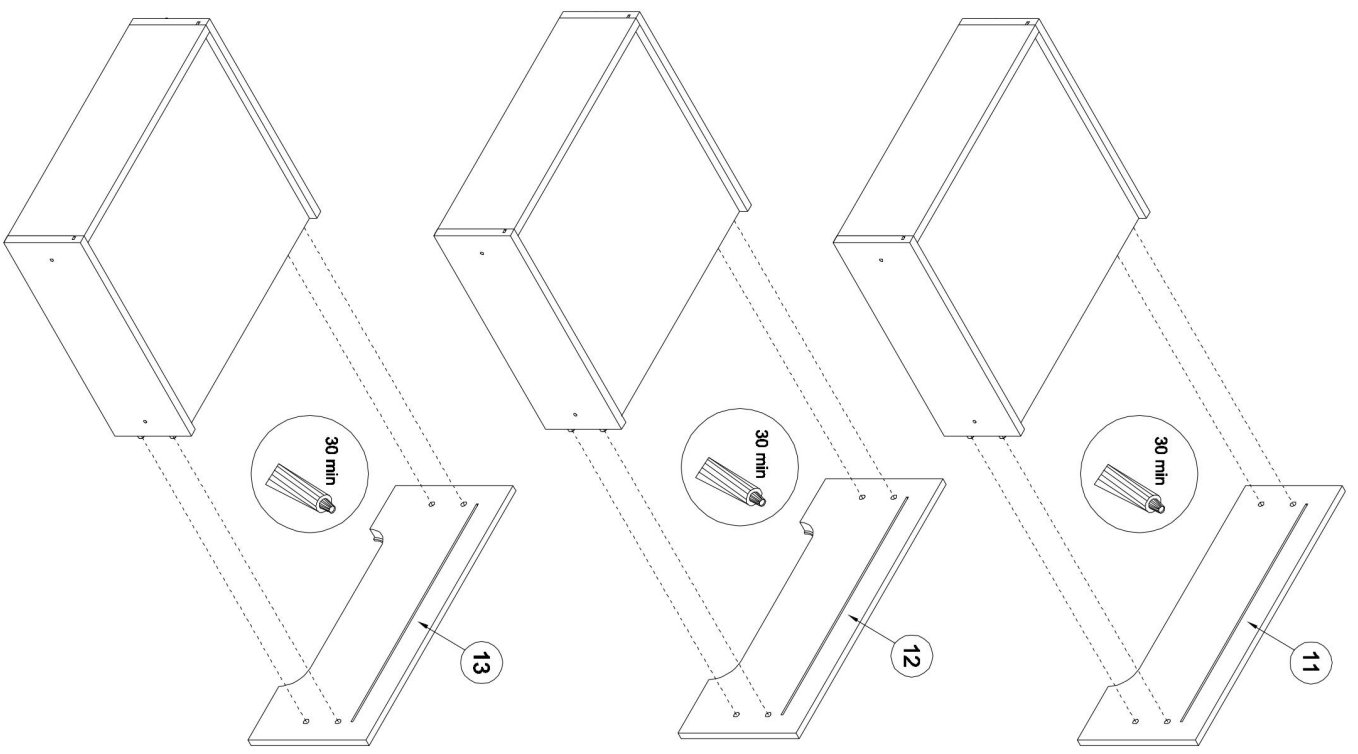

14

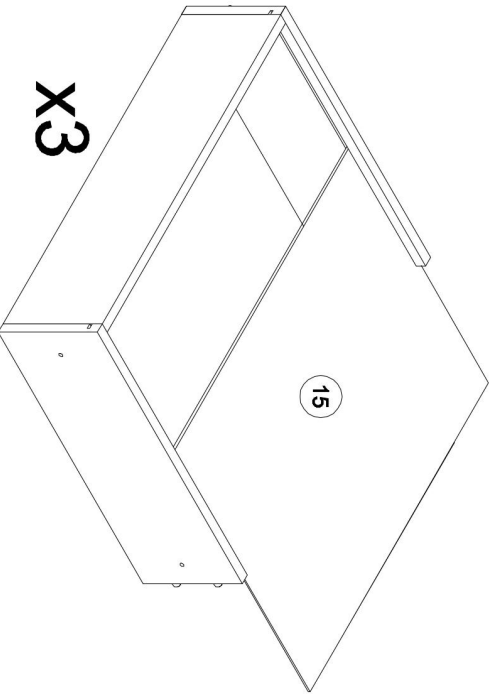

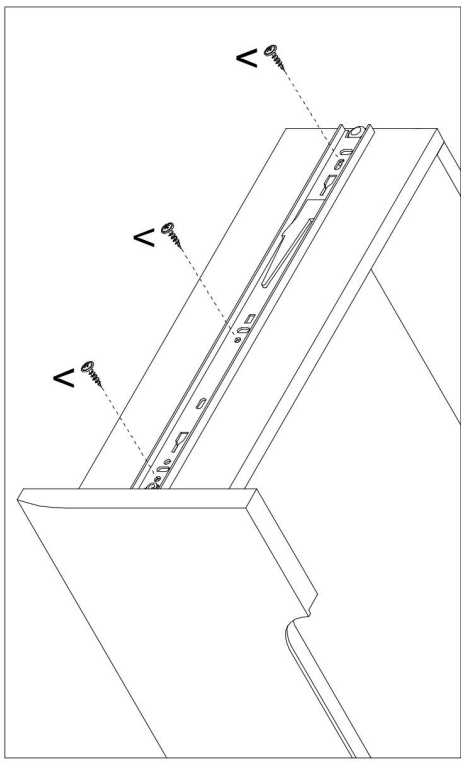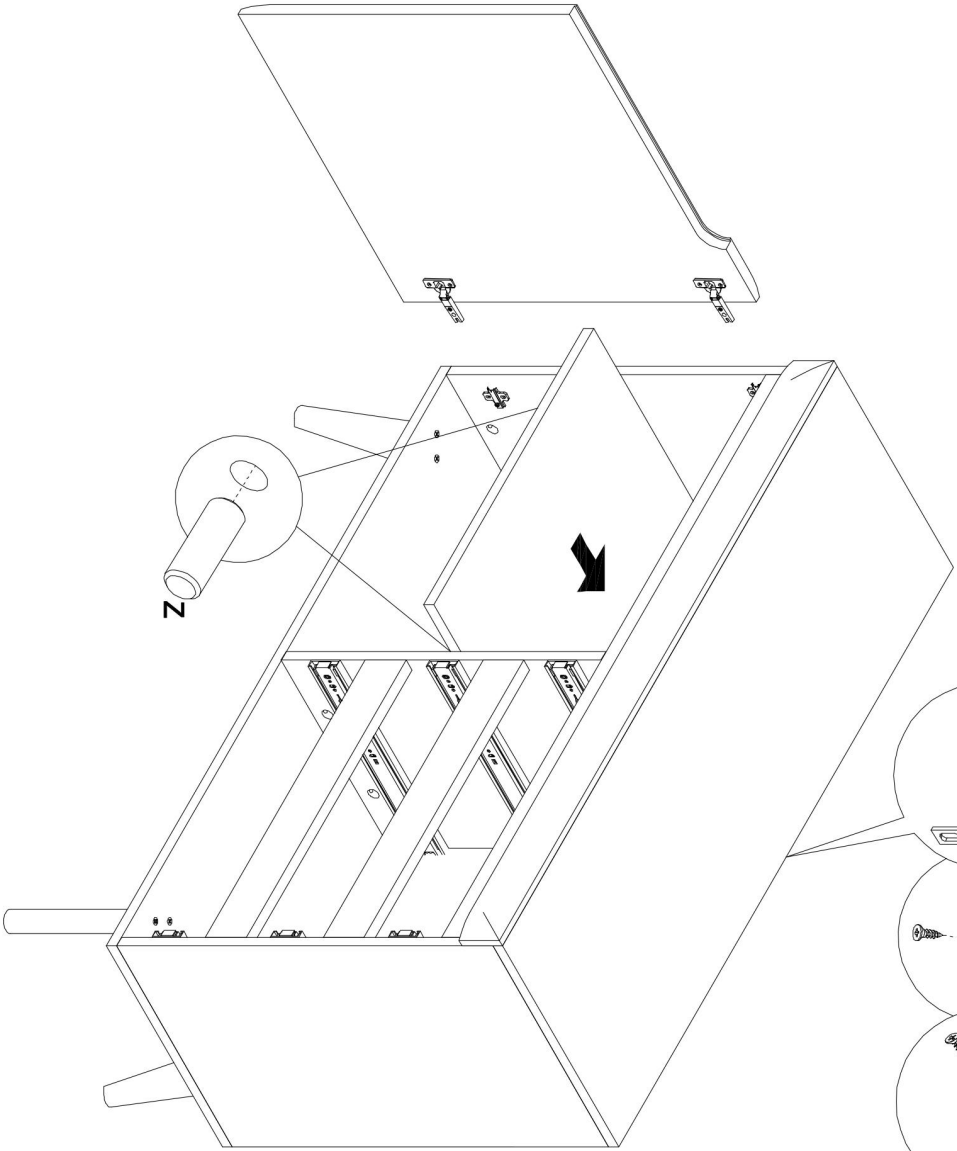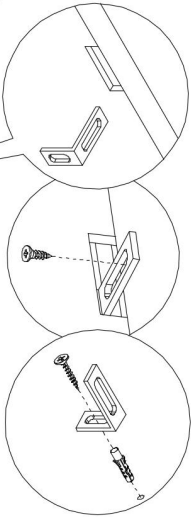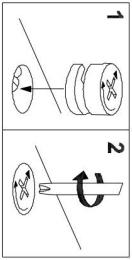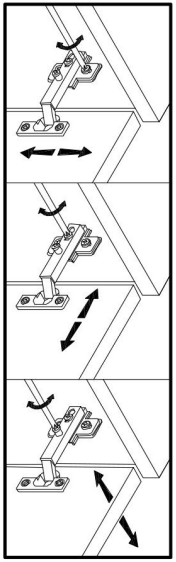

- TB  x1
- TA  x1
- NA  4x13 x1
- Z  x4
- V  3x13 x18

